

Ersatzteilliste NG-L

Pos.	Bezeichnung		NG-L 30 Art.-Nr.	NG-L 50 Art.-Nr.	NG-L 80 Art.-Nr.	NG-L 100 Art.-Nr.
1	Gasarmatur		101299	103417	103417	103417
2	Schutzkappe für Gasarmatur		1-03204	1-03191	1-03191	1-03191
3	Kondensator		101377	102813	101377	1-00855
4	Thermostatsteckdose		3-01510	3-01510	3-01510	3-01510
5	Hauptschalter „Lüften – 0 – Heizen“		100818	100818	100818	100818
6	Motor / Ventilator		102390	1-02761	1-02743	1-02570
7	Zünderlektrode		103311	103311	103311	103311
8	Schaltkasten		1-01747	1-01747	1-01747	1-01747
9	Flammenwächter IRD 1020 Altern. KLC 2002		100217 1-03090	100217 1-03090	100217 1-03090	100217 1-03090
10	Fühlerkabel für IRD 1020		100720	100720	100720	100720
11	Magnethalter für IRD 1020 Alternativ Befestigungsflansch		100719 1-03546	100719 1-03546	100719 1-03546	100719 1-03546
12	Differenzdruckwächter		101300	101300	101300	101300
13	Sicherheitstemperaturbegrenzer (STB)		100219	100219	100219	100219
14	Gasfeuerungsautomat Siemens LME41		1-03451	1-03451	1-03451	1-03451
15	Zündtrafo ZAG 1V		101265	101265	101265	101265
16	Entstörtaster		1-01047	1-01047	1-01047	1-01047
17	Relais (2x)		1-00676	1-00676	1-00676	1-00676
18	Sicherung		1-00562	1-00562	1-00562	1-00562
19	Entstörkondensator		1-00394	1-00394	1-00394	1-00394
20	Gasdüse		lt. Tabelle 1	lt. Tabelle 1	lt. Tabelle 1	lt. Tabelle 1
21	Zündkabel		101190	101190	101190	101190
22	Brennkammer		3-00853	3-00807	-----	3-00275
23	Brennerkopf		3-00346	3-00795	3-00795	3-00269