












 













**Ersatzteilliste NG-LF**

Pos.	Bezeichnung		NG-LF				
			10 Art-Nr.	20 Art-Nr.	30 Art-Nr.	50 Art-Nr.	75 Art-Nr.
1	Brennerkopf		3-00353	3-00353	3-00353	3-00353	3-00346
2	Flammenwächter IRD 1020 Altern. KLC 2002		100217 1-03090	100217 1-03090	100217 1-03090	100217 1-03090	100217 1-03090
3	Fühlerkabel für IRD 1020		100720	100720	100720	100720	100720
4	Gas-Set		100912	100911	102873	102873	102873
5	Betriebsschalter		100867	100867	100925	100925	100925
6	Kondensator		-----	102683	101377	101377	-----
7	Magnethalter für IRD		100719	100719	100719	100719	100719
8	Sicherheitstemperaturbegrenzer 230 V		100219	100219	100219	100219	100219
9	Gasfeuerungsautomat DKG 972 N		1-03419	1-03419	1-03419	1-03419	1-03419
10	Ventilator		102391	102392	102390	102390	100050
11	Ventilatorflügel		-----	-----	-----	-----	101883
12	Zünderlektrode		103311	103311	103311	103311	103311
13	Zündkabel		101190	101190	101190	101190	101190
14	Zündtrafo ZAG-1		101265	101265	101265	101265	101265
15	Schlauchbruchsicherung		102168	103575	102170	102170	102170
16	Gasdruckregler		103776	100913	102964	102964	102964
17	Gasschlauch		1-02441	1-02441	1-02442	1-02442	1-02442
18	Relais		1-00676	1-00676	1-00676	1-00676	1-00676
19	Schaltkastengehäuse		1-00946	1-00946	1-01747	1-01747	1-01747
20	Entstörkondensator		1-00394	1-00394	1-00394	1-00394	1-00394
21	Doppelmagnetventil		102693	102693	102693	102693	102693
22	Schutzrohr für IRD 1020		300289	300289	300289	300289	300289
23	Wirbelscheibe		300373	300373	300384	300384	300384
24	Sicherung		1-00562	1-00562	1-00562	1-00562	1-00562
25	Entstörtaster		1-01047	1-01047	1-01047	1-01047	1-01047