

Lista części NG-L

Poz.	Opis		NG-L 30 Nr art.	NG-L 50 Nr art.	NG-L 80 Nr art..	NG-L 100 Nr art.
1	Armatura gazowa		101299	103417	103417	103417
2	Nasadka ochronna ArmatURY gazowej		1-03204	1-03191	1-03191	1-03191
3	Kondensator		101377	102813	101377	1-00855
4	Gniazdo termostatu		3-01510	3-01510	3-01510	3-01510
5	Przełącznik główny wentylacja – 0 – grzanie		100818	100818	100818	100818
6	Silnik / wentylator		102390	1-02761	1-02743	1-02570
7	Elektroda zapłonu / iskrownik		103311	103311	103311	103311
8	Obudowa skrzynki sterowniczej		1-01747	1-01747	1-01747	1-01747
9	Detektor płomienia zapłonowego na podczerwień IRD 1020 alternatywny. KLC 2002		100217 1-03090	100217 1-03090	100217 1-03090	100217 1-03090
10	Kabel czujnika dla IRD 1020		100720	100720	100720	100720
11	Uchwyt magnetyczny dla IRD Alternatywnie kołnierz montażowy		100719 1-03546	100719 1-03546	100719 1-03546	100719 1-03546
12	Presostat różnicy ciśnień		101300	101300	101300	101300
13	Zabezpieczający ogranicznik temperatury		100219	100219	100219	100219
14	Automat kontroli palnika Siemens LME41		1-03451	1-03451	1-03451	1-03451
15	Transf. zapłonowy ZAG 1V Cewka W.N.		101265	101265	101265	101265
16	Przycisk odblokowujący		1-01047	1-01047	1-01047	1-01047
17	Przełącznik (2x)		1-00676	1-00676	1-00676	1-00676
18	Bezpiecznik		1-00562	1-00562	1-00562	1-00562
19	Kondensator do usuwania ładunków elektrostatycznych		1-00394	1-00394	1-00394	1-00394
20	Dysza		Wg . tabeli 1	Wg . tabeli 1	Wg . tabeli 1	Wg . tabeli 1
21	Kabel zapłonu		101190	101190	101190	101190
22	Komora spalania		3-00853	3-00807	-----	3-00275
23	Głowica palnika		3-00346	3-00795	3-00795	3-00269